


UniRig-1000 Bumper Bar Assembly

(Sizing the Span-Bar to fit your rigging)

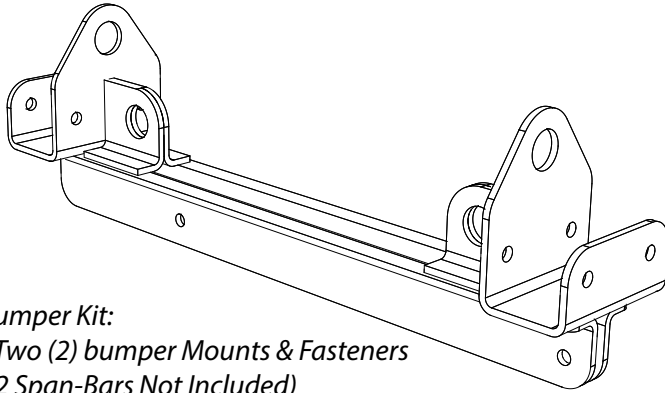

*UniRig-Bumper Kit:
Includes Two (2) bumper Mounts & Fasteners
(Note: 2x2 Span-Bars Not Included)*




1. After mounting the UniRig-1000 on your finished enclosures, measure the distance between the tongue mounts, center to center and add 4" to the length. That will be the cut Length for your span-Bar.

2. To mark the holes locations for drilling, mount the Bumper Mount Assemblies on your enclosure and clamp the 2x2 span-bars in place. Use a t-square to check the alignment and spacing before marking to the hole locations.

3. Use a drill press to make through holes to ensure Perpendicularity.

4. Assemble using only the supplied fasteners. The head of the bolt should go on the outside of the bumper.

Note: Be sure to follow proper rigging procedures when flying

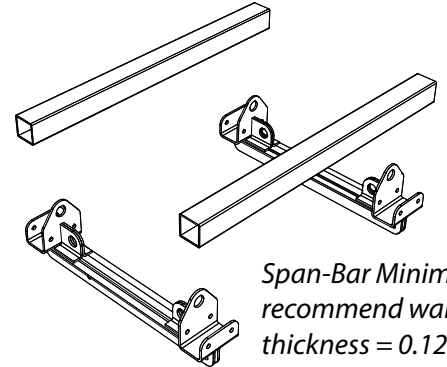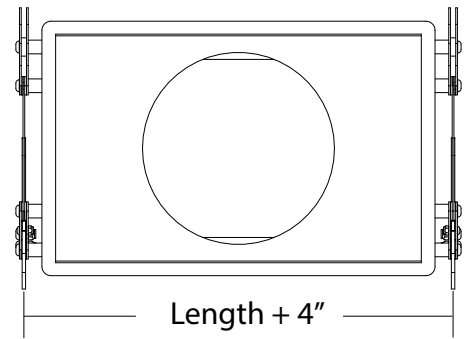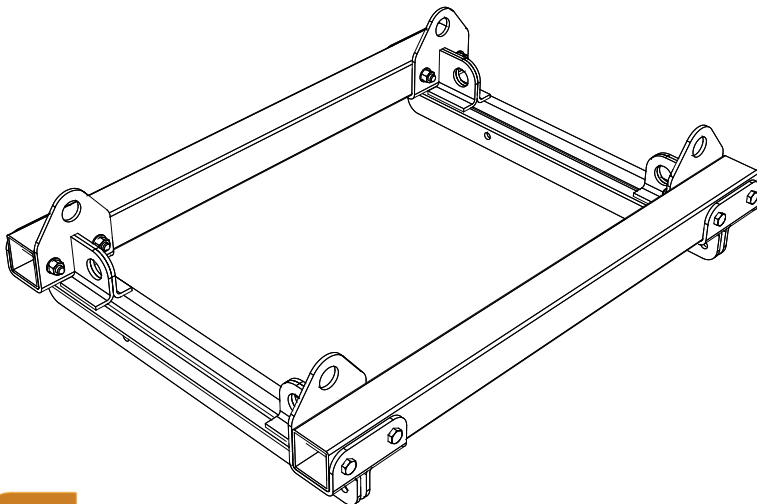

*Span-Bar Minimum
recommend wall
thickness = 0.125"*



Place Clamp

